 
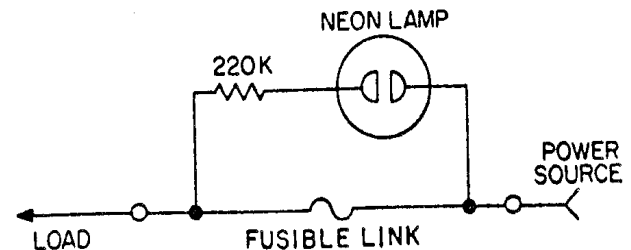 


Dead Front Fuse Holders

- Clear for 90 + volts
- Amber for < 90 volts
- So what?
- Current still flowing with blown fuse
- What does empty fuse holder mean?
- Can pull up to 10 amps at 480 volts but shouldn't

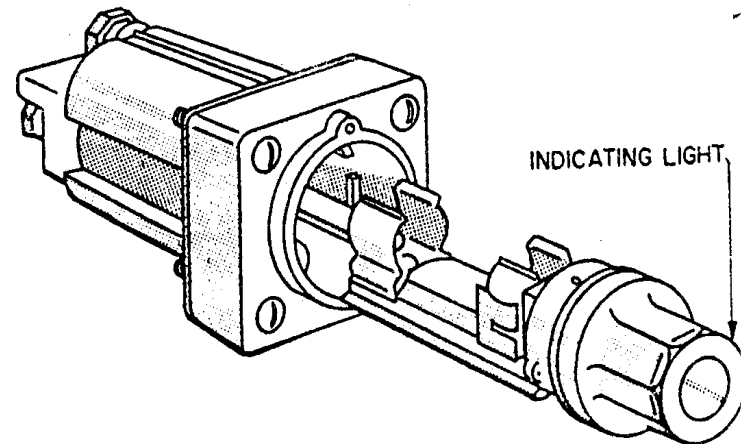 


FUSE PLUGS

NSN: 6250-01-497-5783

Red plastic fuse plugs may be inserted into dead front fuse holder receptacles

Rubber seal
flange

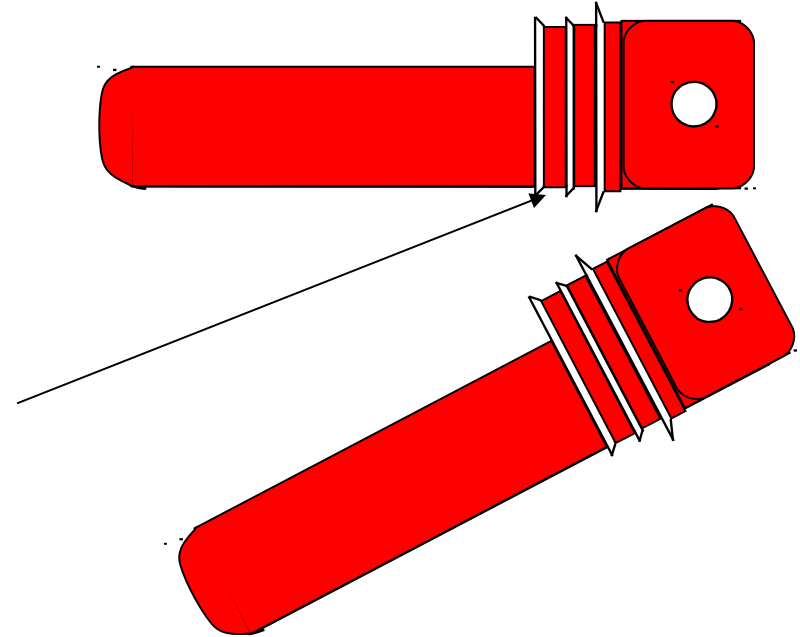

These will be used instead of taping over the receptacle holes

